

Joyce/Dayton Corp.

Operation and Maintenance Manual for Joyce/Dayton Rotary Limit Switch Model LS8-404




DESCRIPTION:

This rotary limit switch is designed to control the limits of travel of rotating reversing equipment.

The limit switch input shaft is connected to a worm gear. Adjustable self-lubricating nylon roller cams are concentrically mounted to the worm gear. These adjustable cams actuate either single pole double throw (S.P.D.T.) or double pole double throw (D.P.D.T.) precision limit switch units.

CAUTION: DISCONNECT ELECTRICAL POWER BEFORE REMOVING COVER. DANGER OF SEVERE ELECTRICAL SHOCK.

Electrical Contact Ratings			
Contacts	Volts	Make & Break Amperes	
		AC	DC
SPDT	110 220 440 600	15 15 15 15	0.25 0.1 - -
DPDT	115 230 440 575	10 10 10 10	0.2 0.1 -

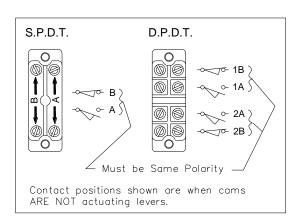



ADJUSTMENT:


Refer to figure 1. The electrical switch units "G", "H", "L", and "M" are shown with contact positions assumed when the cams are not actuating the switch units.

When the cam rotates and actuates the "B" (closed) contact opens and the 'A" (open) contact closes. Each electrical switch unit has (1) one independent adjustable cam.

To Adjust "G" Switch	To Adjust "H" Switch	
1. Loosen Yellow set screw.	1. Loosen Green set screw.	
2. Turn screw "C" until cam trips "G"	2. Turn screw "D" until cam trips "H"	
3. Retighten Yellow set screw.	3. Retighten Green set screw.	
To Adjust "L" Switch	To Adjust "M" Switch	
1. Loosen Blue set screw.	1. Loosen Red set screw.	
2. Turn screw "J" until cam trips "L"	2. Turn screw "K" until cam trips "M"	
3. Retighten Blue set screw.	3. Retighten Red set screw.	

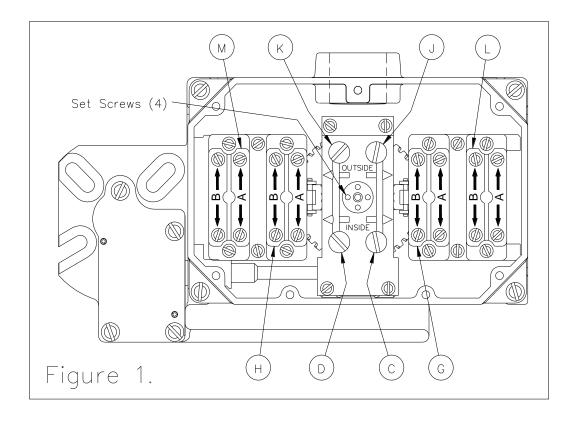

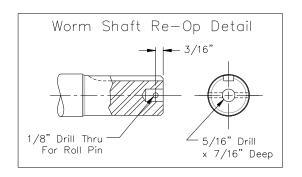

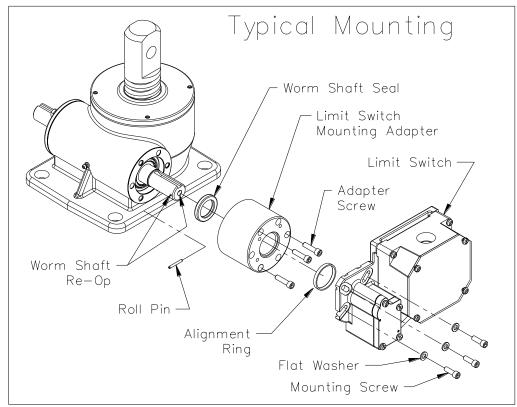



Joyce Dayton Serial Number Tag

Contact Joyce Dayton Corporation and provide the serial number to obtain the product information needed for maintenance, repair and reorder.

Joyce Dayton Corp P.O. Box 1630 Dayton, Ohio 45401

Phone (800) 523-5204 (U.S. & Canada); (937) 294-6261 Fax (937) 297-7173

www.joycedayton.com E-mail: sales@joycedayton.com